

Hino J05E-TP 5.0L

BG Diesel EGR System Service Instructions



Wear safety goggles to protect your eyes.



Wear Nitrile®, Neoprene® or PVC gloves to protect your hands.



Wear a long-sleeved shirt to protect your arms.


IMPORTANT! Read product Safety Data Sheet before handling any BG product.

Adaptors required:

- BG EF692 EGR square 4 hole intake adaptor, PN E101-1685
- BG EF627 EGR oval 2 hole exhaust adaptor, PN E101-1666
- BG EF399 EGR manifold, PN E101-1645



BG EF692 EGR intake adaptor, PN E101-1685

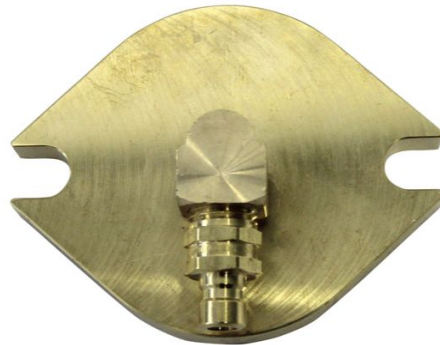

BG EF627 EGR exhaust adaptor, PN E101-1666



BG EF399 EGR manifold, PN E101-1645

Tools required:

- BG 64 Diesel VIA® supply tool, PN E101-1642


EGR System Consists of:

- Cold side EGR valve (after EGR cooler) which allows for proper emissions control of No_x gases
- EGR cooler (controls temperature of exhaust gases to the air intake to the engine)
- EGR temperature sensor (measures EGR cooler exhaust temperature and efficiency)

These components are critical for proper emissions control and must be cleaned on a regular basis for optimum efficiency.

Locations of EGR components:

- EGR valve (Figure 1), EGR cooler and outlet pipe(Figure 1)


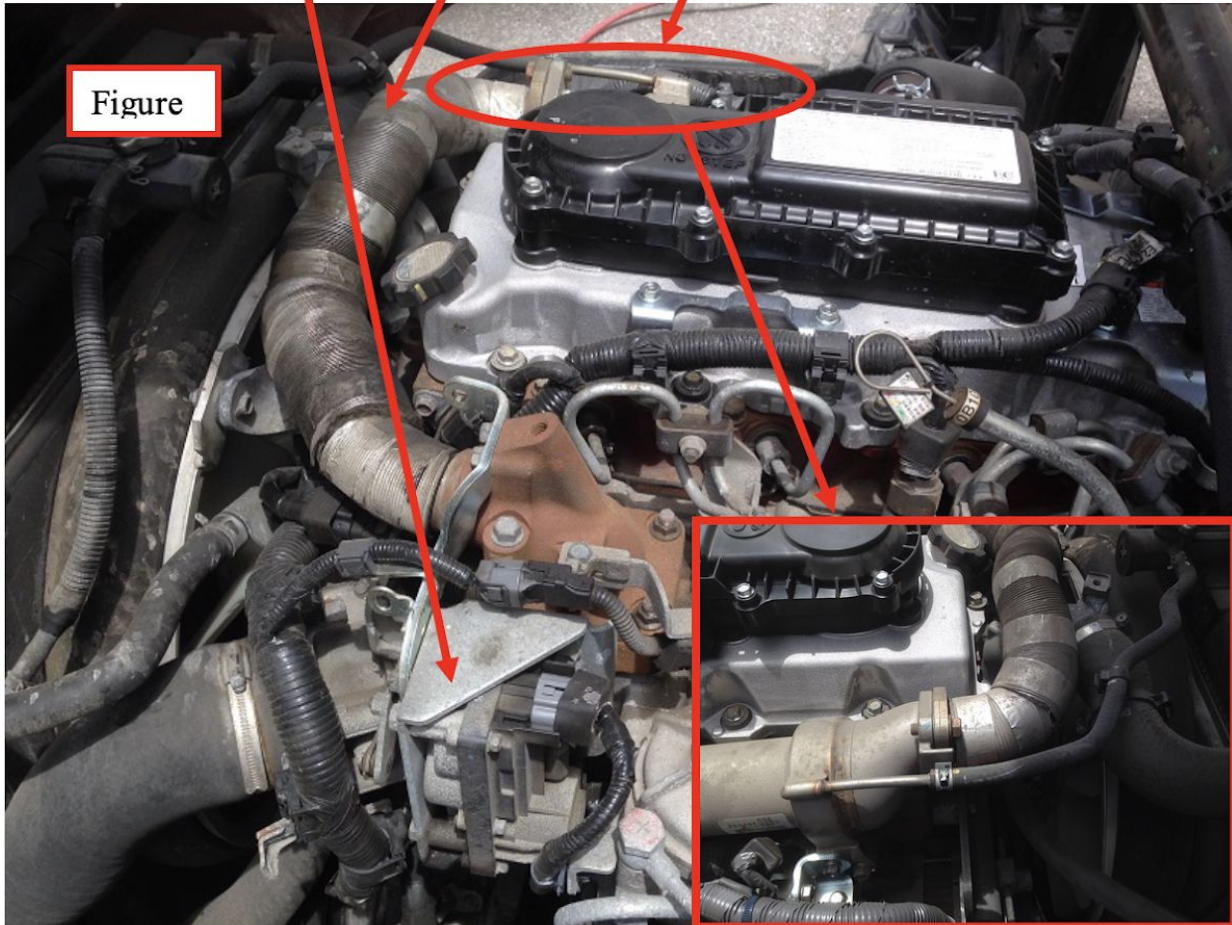


EGR Inspection

NOTE: Before starting the EGR cleaning service, inspect the EGR components for severe deposits or clogging. Manual cleaning may be required (by scraping, sucking, wiping, etc.) before performing the service.

Service procedure



1. Add BG 245 Premium Diesel Fuel System Cleaner, PN 245, to vehicle's fuel tank.
2. Remove plastic engine cover and foam insulator.
3. Remove the two bolts on the EGR cooler outlet (Figure 2). Remove the two bolts and two nuts at the EGR valve. Remove one bolt and one nut that secure the EGR valve bracket (Figure 2a). Unclip harness from the bracket (Figure 2b).

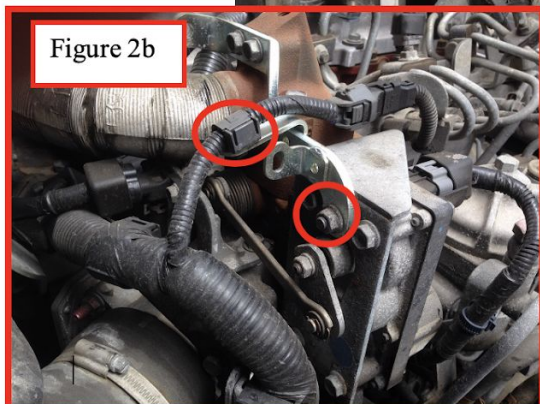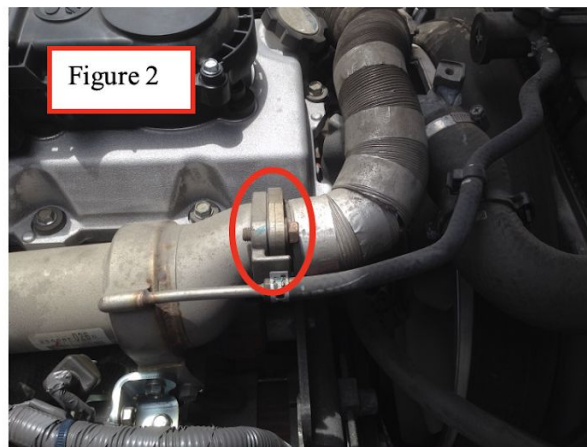



4. Remove EGR cooler outlet pipe and set aside. Set gasket aside on EGR cooler side as it will not be used in the following steps.

Quick Tip: Place the EGR cooler outlet pipe into a container and fill the container with BG Diesel EGR System Cleaner, PN PD10, until submerged. This will aid in the dislodging of soot from the pipe while the EGR cleaning procedure is performed.

5. Install the BG EF692 intake adaptor using the existing bolts (Figure 3). With the existing nuts and the two provided bolts, install the BG EF627 exhaust adaptor (Figure 3a).

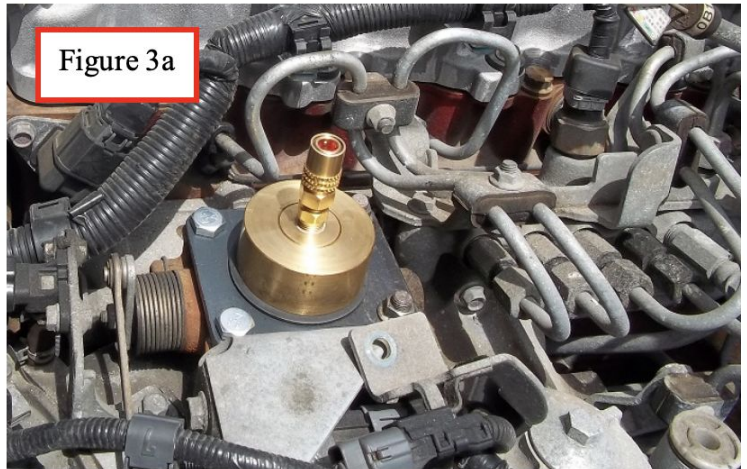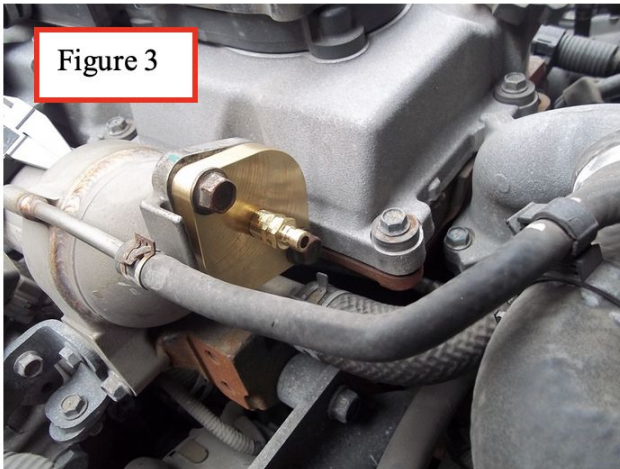

6. Attach the BG EF399 manifold to the BG EF692 intake and BG EF627 exhaust adaptors. Attach the BG 64 Diesel VIA® supply tool to the BG EF399 manifold. Ensure that the air valve and fluid valve on the supply tool are closed (see supply tool instructions).
7. With your hand, push the EGR valve linkage toward the engine. This will open the EGR valve (Figure 4). Using vice grips, secure the EGR linkage to hold the EGR valve open and unplug the EGR electrical connection (Figure 4a).

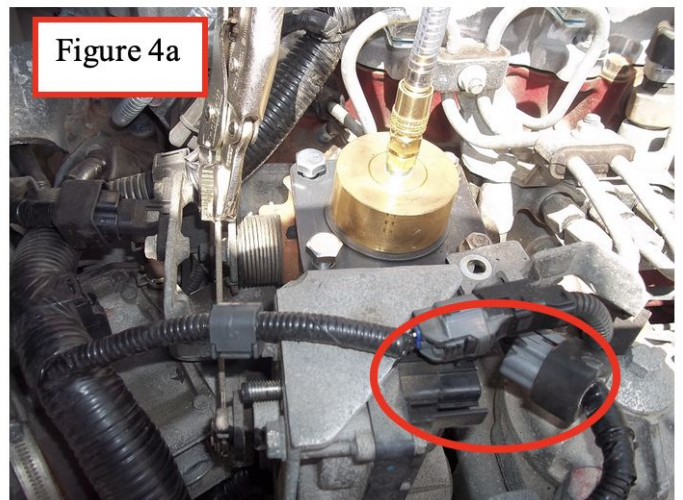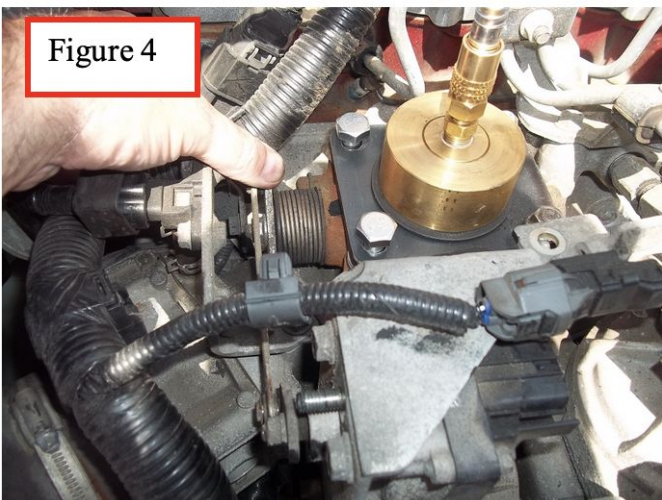

8. If the engine is hot, the EGR cooler must be cooled before treatment can start. Open the supply tool air valve, keeping the fluid valve closed. Turn the BG EF399 manifold to exhaust and flush the EGR cooler with air for two minutes.
9. Unscrew fill cap and fill supply tool with 64 oz. (1.8 L) of BG Diesel EGR System Cleaner, PN PD10.
10. Reinstall the fill cap and hang supply tool from the hood latch. Connect shop air. Set air pressure on the tool to 40–50 psi.
11. Start the vehicle engine. Ensure the BG EF399 manifold is set to exhaust.
12. Open the air valve on the supply tool. Adjust the regulator to maintain the initial pressure of 40–50 psi. Then open the supply tool fluid valve.
13. After $\frac{1}{4}$ of the fluid has been dispensed, close the fluid valve and let the air flow for an additional two minutes to flush deposits into the exhaust stream.
14. Repeat steps 12 and 13.
15. Turn the BG EF399 manifold to intake. Open supply tool fluid valve and continue service until the supply tool is empty.

NOTE: If at any time during the intake service you hear a diesel knock sound, turn the BG EF399 manifold to off for two minutes. After two minutes, turn the BG EF399 manifold to intake and continue service.

16. When supply tool is empty, let the vehicle operate for an additional five minutes and rev the engine several times to clear all residual fluid.
17. Repeat steps 9–16 using 32 oz. (946 mL) of BG Diesel EGR System Rinse, PN PD11.

NOTE: For severe coking, it may be necessary to perform the service a second time to achieve desired results.

18. Turn the fluid and air valves on the supply tool to the closed position. Turn the vehicle off. Detach shop air line and depressurize the supply tool by rotating the regulator knob counterclockwise.
19. After the EGR cooler outlet pipe has soaked for 15 minutes, clean the pipe using the BG Diesel EGR System Cleaner. Fluid can be saved for use on other EGR components if required.
20. Remove adaptors and reassemble vehicle components in the reverse order of removal.
21. After service, reset any engine codes. The vehicle should then be set to run a manual regeneration cycle. If that is not possible, the vehicle should be driven at highway speeds (or in the case of non-highway equipment operated under a load) for approximately 30 minutes. This is necessary to remove all of the residual fluid from the passages and cooler(s) and to combust any material that has reached the diesel oxidation catalyst (DOC) and diesel particulate filter (DPF). **This should be done as soon as possible after the service.**